

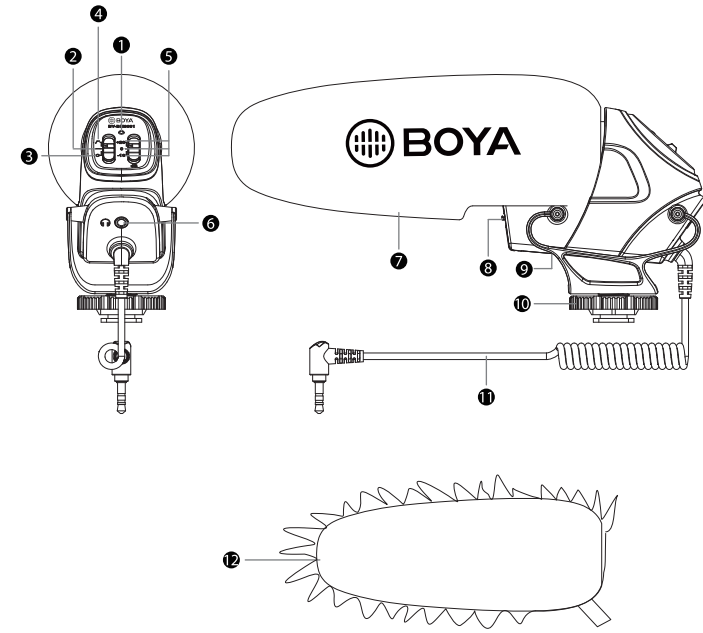
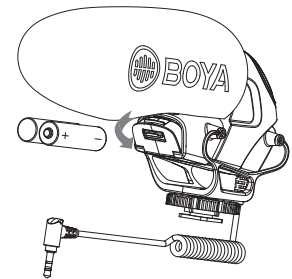
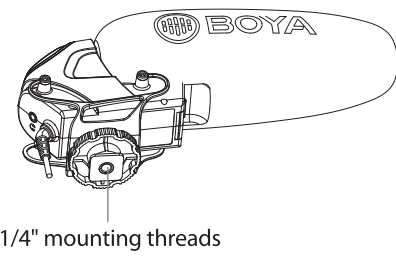
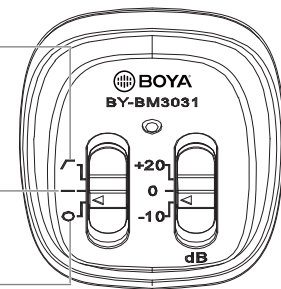
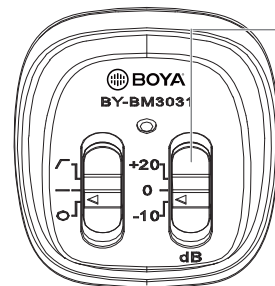


	1		2
品牌	BOYA	长丰型号	BY-BM3031

7		8		
修改名称	版本	变更内容	变更日期	变更担当
BY-BM3031说明书	V02	内容更新	2020-4-13	吴蒙蒙

<div></div> <div></div> <div><h3>BY-BM3031</h3><p>On-Camera Shotgun Microphone</p><p>机顶枪型超心型麦克风</p><p>Instruction Manual</p><p>说明书</p></div>	<p>Thanks for choosing BOYA!</p> <p>The BOYA BY-BM3031 is a Super-cardioid condenser shotgun microphone that delivers high-quality sound for DSLRs, camcorders, audio recorders and more.</p> <p>It features a three-level gain switch that provides a +20 dB boost, 0 dB unity gain, or -10 dB pad to prevent distortion from audio overload. And also features a switchable high-pass filter at 80 Hz to roll off unwanted low-frequency noise and rumble.</p> <p>The lightweight mic attaches easily to any camera equipped with a 3.5mm microphone jack or to a boom pole, and integrates a built-in shock mount that helps eliminate unnecessary vibrations that create excessive background noise.</p> <p>This mic includes a foam windscreen and fur windscreen that helps to decrease vocal plosives and wind noise when recording dialog and powered by two pieces of AA batteries (not included) for up to 120 hours.</p> <p>PACKAGE CONTENTS</p> <ul style="list-style-type: none">• Microphone• Foam windscreen• Fur windscreen• Carrying pouch• Quick Setup Guide	<p>INSTRUCTURE</p> <ol style="list-style-type: none">1. Power Indicator2. Mic ON (FLAT)3. Mic OFF4. Mic ON (High Pass Filter)5. Three position level control (-10dB, 0, +20dB)6. 3.5mm headphone Jack7. Foam windscreen8. Battery Compartment9. Shock Mount10. Camera Shoe Mount with 1/4" Thread11. 3.5mm TRS Audio cable <p>Note: Cable in illustrations is shown shorter for clarity. The actual cable is longer than the one pictured.</p> <div></div>	<p>HOW TO USE</p> <p>Installing the battery</p> <ol style="list-style-type: none">1. Press the bottom of battery compartment lid down and lift it up.2. Insert the AA battery. Make sure that the + and – signs match the symbols in the compartment.3. Replace the battery compartment lid. <div></div> <p>SETTING UP YOUR MICROPHONE</p> <p>To attach your microphone to a camera:</p> <ol style="list-style-type: none">1. Loosen the locking knob, then slide your microphone's shoe mount onto your camera.2. Tighten the locking knob to secure your microphone.3. Connect the 3.5 mm audio cable to your camera. <p>To attach your microphone to a tripod:</p> <ol style="list-style-type: none">1. Tighten the microphone to the 1/4" screw on a tripod or tripod plate. See the instructions that came with your tripod for more information.2. Connect the 3.5 mm audio cable to your camera. <div></div> <p>1/4" mounting threads</p>	<p>USING YOUR MICROPHONE</p> <ol style="list-style-type: none">1. Turn on your camera.2. Slide the power switch to ON (—, Flat), the LED indicator lights up. <p>To use the low-cut filter switch, slide up(↗) to turn the filter on.</p> <div></div> <p>To turn off low-cut filter switch, slide to (—)</p> <p>To turn off the microphone, slide to (o).</p> <p>Note: The low-cut filter minimizes the impact of low frequency hum, camera motor noise, and similar low frequency ambient noise.</p> <div></div> <p>The Output Gain Control Button control will switch the microphone output gain between 0, -10 and +20dB. Press the Output Gain Control Buttons to cycle through the three settings.</p> <p>Note:</p> <ul style="list-style-type: none">- Use the microphone boost switch to raise the output of the microphone by 20dB without having to get closer to the subject.- Take care when setting the audio levels especially while wearing headphones. <ol style="list-style-type: none">3. Aim the microphone at the sound source and away from unwanted sound sources (only if used on a tripod). Tip: If using a tripod, the microphone could be held below or above as well as straight in-front of the sound source.4. Slide the power switch to OFF when you finished recording.	<p>TROUBLESHOOTING</p> <table><tr><th>Problem</th><th>Solution</th></tr><tr><td>No sound was recorded</td><td>Make sure that two fresh AA batteries are installed and correctly oriented in the battery compartment. Make sure the power switch on the microphone is set to the ON position and the LED indicator is on. Make sure that 3.5mm mini plug is connected to the correct AUDIO INPUT jack on the device to which you are recording.</td></tr><tr><td>Microphone stops working</td><td>Verify LED is lit when power switch is in the ON position. Replace battery if not.</td></tr><tr><td>Sound is too quiet</td><td>Enable the microphone boost (+20dB switch), move closer to the subject, consult camera owner's manual for audio recording settings.</td></tr><tr><td>Sound is distorted</td><td>Make sure the microphone boost is switched off, move away from the subject, consult camera owner's manual for audio recording settings.</td></tr><tr><td>The microphone is stuck in the camera's shoe mount</td><td>Make sure the locking wheel is fully loosened.</td></tr></table> <p>MAINTAINING YOUR MICROPHONE</p> <ul style="list-style-type: none">• Keep your microphone away from dust, moisture, or water.• To clean the housing, wipe with a dry micro-fiber cloth to remove dust.• Store your microphone in the included pouch to protect it from dirt and dust. <p>IMPORTANT SAFETY INFORMATION</p> <ul style="list-style-type: none">• Make sure that you follow all safety notes.• Keep these instructions for use in a safe place. If you sell the equipment or pass it on to someone else, you should also pass on these instructions for use.	Problem	Solution	No sound was recorded	Make sure that two fresh AA batteries are installed and correctly oriented in the battery compartment. Make sure the power switch on the microphone is set to the ON position and the LED indicator is on. Make sure that 3.5mm mini plug is connected to the correct AUDIO INPUT jack on the device to which you are recording.	Microphone stops working	Verify LED is lit when power switch is in the ON position. Replace battery if not.	Sound is too quiet	Enable the microphone boost (+20dB switch), move closer to the subject, consult camera owner's manual for audio recording settings.	Sound is distorted	Make sure the microphone boost is switched off, move away from the subject, consult camera owner's manual for audio recording settings.	The microphone is stuck in the camera's shoe mount	Make sure the locking wheel is fully loosened.
Problem	Solution																
No sound was recorded	Make sure that two fresh AA batteries are installed and correctly oriented in the battery compartment. Make sure the power switch on the microphone is set to the ON position and the LED indicator is on. Make sure that 3.5mm mini plug is connected to the correct AUDIO INPUT jack on the device to which you are recording.																
Microphone stops working	Verify LED is lit when power switch is in the ON position. Replace battery if not.																
Sound is too quiet	Enable the microphone boost (+20dB switch), move closer to the subject, consult camera owner's manual for audio recording settings.																
Sound is distorted	Make sure the microphone boost is switched off, move away from the subject, consult camera owner's manual for audio recording settings.																
The microphone is stuck in the camera's shoe mount	Make sure the locking wheel is fully loosened.																

- 技术要求:
- 1、表面无色差
 - 2、无正负公差
 - 3、包装标注尺寸为内尺寸

受控文件
2020-4-13
长丰影像

长丰影像
2020-4-13
吴蒙蒙

JIAYZ 长丰 深圳市长丰影像器材有限公司					
子件名称	BY-BM3031 说明书	版本	V02		
子件编号	1F0300300121	材质	105g双铜纸	双面印刷	6折页
尺寸	105x178	比例	1:1	单位	mm
设计/日期	吴蒙蒙 2020-4-13	审核	暂无	核准/日期	赵宏亮