





KodakFilm


HOW TO : Use the KODAK FunSaver...

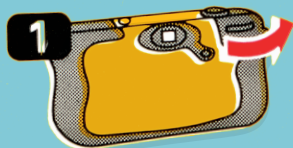


Wind

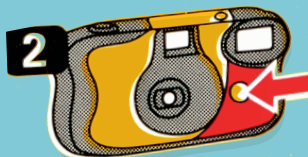

Press and hold for
Flash Ready Light

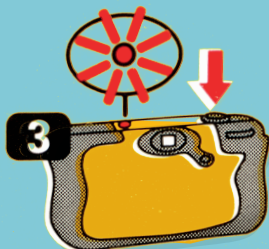

Flash Ready Light On,
Shoot

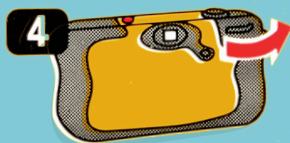

Repeat